




Carey Precast
 3420 Township Hwy 98
 Carey, OH 43316
 800-852-3987
 www.careyprecast.com

Choosing the Correct Size PermEntry® Basement Entrance

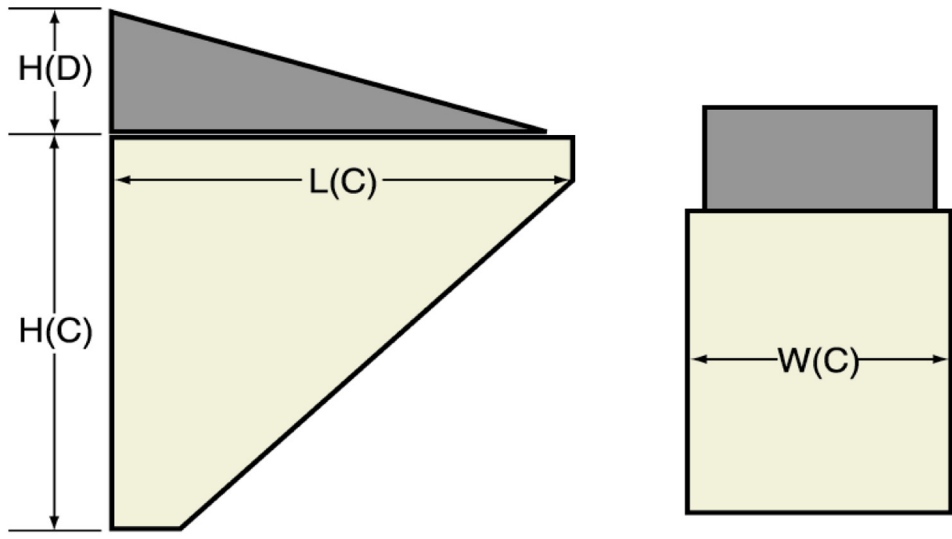

1. Determine the measurement from the finished grade to the foundation footing.
2. Refer to the table below to select the proper size. The top of the casting should be a minimum of 2" above the finished grade.
3. Double check the PermEntry job site requirements and check site to determine if there is proper truck access to and from the PermEntry installation area.

| Footing to Grade Dimension | Size | PermEntry Casting Dimensions | | | Basement Door Height H (D) |
|----------------------------|------|------------------------------|--------------|-------------|----------------------------|
| | | Height H (C) | Length L (C) | Width W (C) | |
| 35" - 41" | S | 43" | 45" | 51-1/2" | 52" |
| 52" - 58" | O | 60" | 60" | 51-1/2" | 30" |
| 59" - 66" | B | 68" | 66" | 55-1/2" | 22" |
| 67" - 74" | C | 76" | 74" | 55-1/2" | 19-1/2" |
| 75" - 82" | D | 84" | 86" | 55-1/2" | 22" |
| 83" - 91" | E | 92-3/4" | 95-3/8" | 58" | 22" |
| 92" - 99" | F | 101" | 104" | 58" | 22" |